

## ASSEMBLING INSTRUCTION

### CRASH PAD HONDA HORNET 600 (99-06)


**HN6101**

[WWW.BARRACUDAMOTO.COM](http://WWW.BARRACUDAMOTO.COM)

## LEGEND

- |   |  |  |
|---|--|--|
| 1. HEAD PAD<br>TESTA TAMPONE<br>TIESTA DE TOPE<br>STURZPAD KOPF<br>TÊTE TAMPON          | 3. BASE PAD<br>BASE TAMPONE<br>BASE DE TOPE<br>STURZPAD BASIS<br>BASE TAMPON                                     | 5. BOLT M10X90<br>BULLONE M10X90<br>PERNO M10X90<br>BOLZEN M10X90<br>BOULON M10X90 |
| 2. BOLT M10X110<br>BULLONE M10X110<br>PERNO M10X110<br>BOLZEN M10X110<br>BOULON M10X110 | 4. SPECIFIC THICKNESS H.25<br>SPESSORE SPECIFICO H.25<br>ESPACIADOR H.25<br>ABSTANDSHALTER H.25<br>ESPACEUR H.25 |  |

### LEFT SIDE

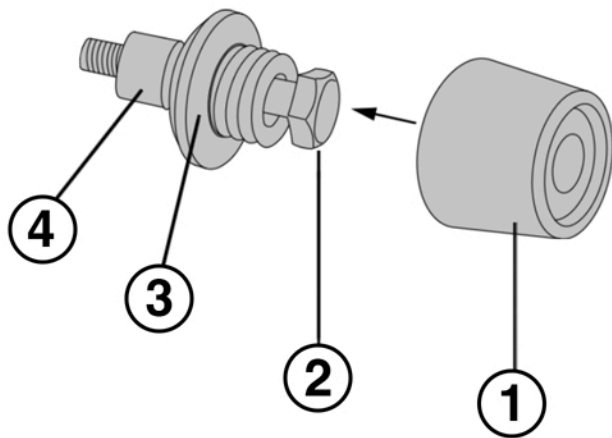

### RIGHT SIDE

