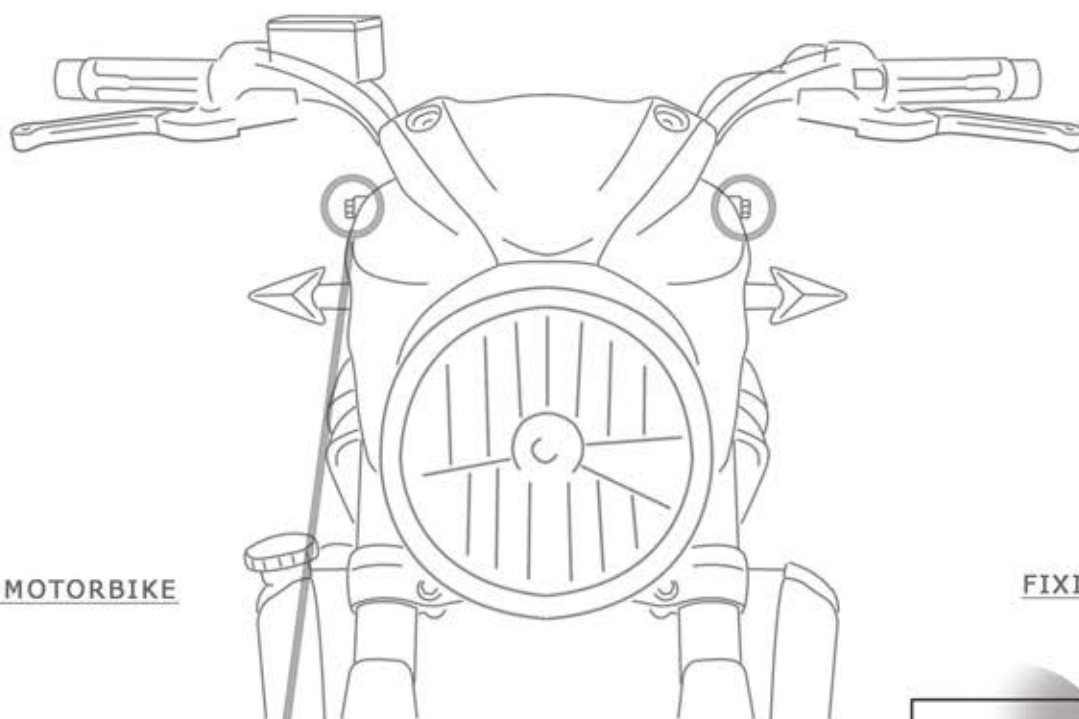
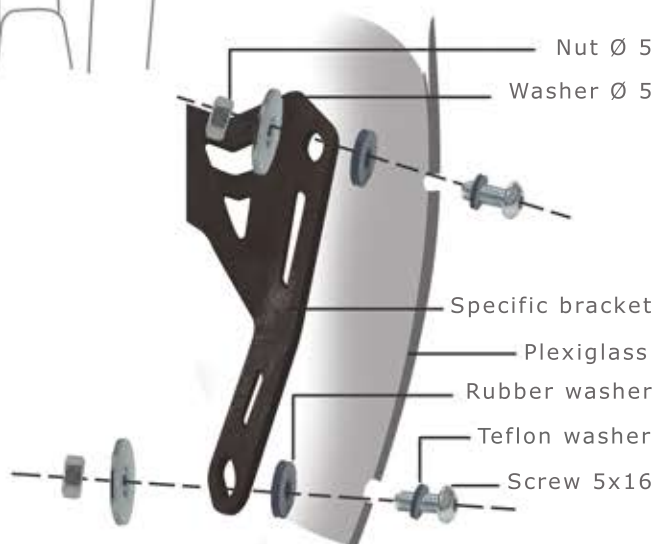


MOUNTING PROCEDURE**KIT WINDSHIELD
SUZUKI SV650 2016****SN6300-16**WWW.BARRACUDAMOTO.COM**FIXING PROCEDURE:**

- INSTALL THE WINDSHIELD BARRACUDA BRACKETS USING THE ORIGINAL SCREWS;
- PUT ALL LIKE SCHEME;
- FIND THE RIGHT POSITION OF WINDSHIELD ON THE BRACKETS ALREADY FIXED AND LOCK ALL THE SCREWS;

KIT

- X1. PLEXIGLASS
- X2. SPECIFIC BRACKET
- X4. AUTOLOCK NUT \varnothing 5
- X4. WASHER LARGE \varnothing 5
- X4. RUBBER WASHER
- X4. TEFLON WASHER \varnothing 5
- X4. SCREW 5X16

**FIXING MOTORBIKE****FIXING WINDSHIELD**

NOTE: DON'T LOCK TOO MUCH TO AVOID PLEXIGLASS BROKEN.